



In locked mode, the students are able to call the teacher, adjust the volume, and set bookmarks. However, they are not able to clear, search for or repeat bookmarks, or to use recorder functions.

